

Dellorto DHLA Float height adjustment

DELLORTO DHLA


FLOAT SETTING INSTRUCTIONS

Inspect the float for damage and be sure that it swivels freely on its pivot pin.

Confirm that the weight of the float corresponds to the weight number marked on the float.

To check the position of the half-floats, hold the carburetor cover vertically as shown so that the float arm is in light contact with the needle without compressing the spring inside the needle.

Check that both half-floats are an equal and correct distance from the chamber cover with the top cover gasket in place.

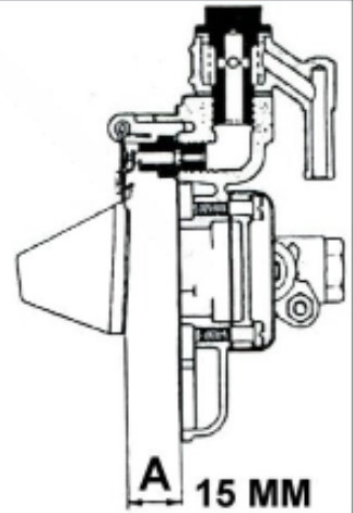

#