


# Dellorto DRLA Float height adjustment

#

## FLOAT LEVEL

- 1) Check that the weight of the float corresponds to specifications as shown on its body and that it is not damaged or leaking.
- 2) Fit the lid gasket in the normal position.
- 3) Fit the float and check that it rotates freely on its hinge pin.
- 4) Hold the lid in the vertical position, as shown in the diagram on the right, so that the float arm is in light contact with the needle.
- 5) In this position check that the two half-floats are at the specified height of 5 to 6 millimeter to the float chamber lid gasket.
- 6) When necessary, adjust the height by gently bending the float arms until the height is within the specified tolerances.

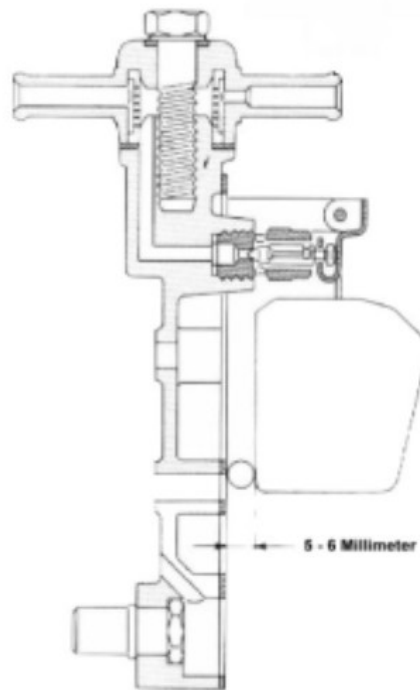

## DELLORTO DRLA

#