

BESTEK

AUTOMOTIVE IGNITION SYSTEMS

Hall TRIGGER IGNITION AMPLIFIER TYPE: IG 100 H INSTALLATION INSTRUCTIONS


When using the pre wired coil just put your 12 volt supply on the coil + and the blue or black lead to the vehicle body ensuring a good earth. Please note: the coil negative must not be grounded.

BROWN or yellow-red : COIL + OR ANY 12 V SUPPLY SWITCHED BY IGNITION.

BLUE or black : EARTH ENSURE GOOD CONNECTION TO BARE METAL.

WHITE : COIL NEGATIVE ONLY TO BE CONNECTED TO COIL-

DISTRIBUTOR : PLUG HALL connector into the distributor.

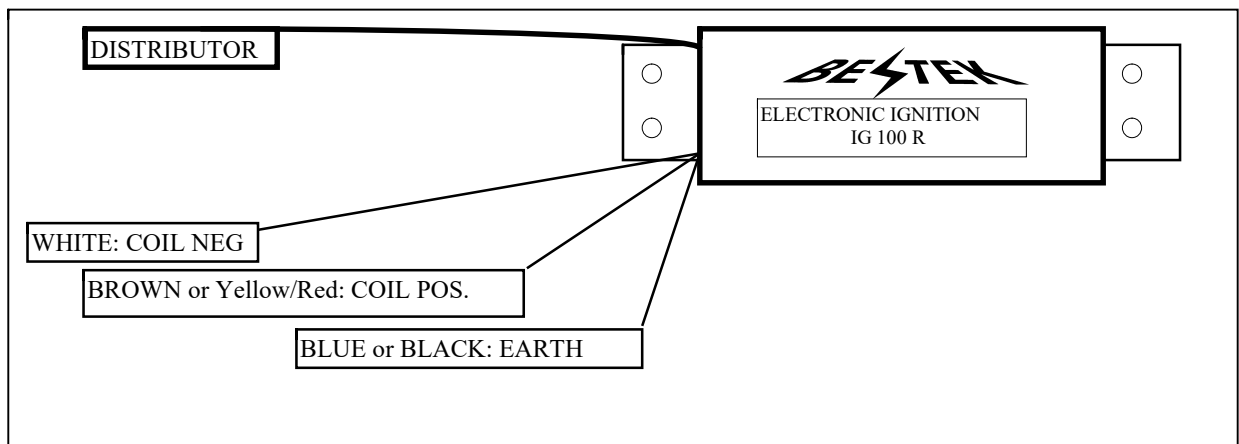

NEGATIVE EARTH ONLY

Bestek, Oakhurst, Radford Road, Tinsley Green, West Sussex. RH10 3NW
Mobile: 07703344068

E-mail: jonny_best@msn.com