

BESTEK

AUTOMOTIVE IGNITION SYSTEMS

RELUCTOR TRIGGER IGNITION AMPLIFIER TYPE: IG 100 R INSTALLATION INSTRUCTIONS


When using the pre wired coil just put your 12 volt supply on the coil + and the ring terminal to the vehicle body ensuring a good earth. Please note: the coil negative must not be grounded.

BROWN: COIL + OR ANY 12 V SUPPLY SWITCHED BY IGNITION.
(new lead orange/yellow)

BLUE: EARTH ENSURE GOOD CONNECTION TO BARE METAL.
(new lead Black)

WHITE: COIL NEGATIVE ONLY TO BE CONNECTED TO COIL-
(new lead white)

DISTRIBUTOR : PLUG INTO QM DISTRIBUTOR PLUG

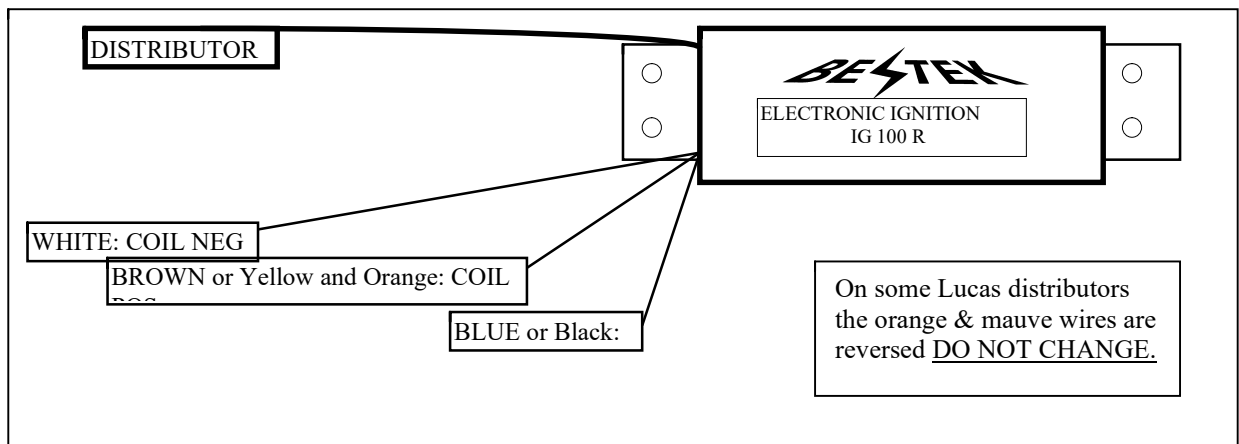

NEGATIVE EARTH ONLY

Bestek, Oakhurst, Radford Road, Tinsley Green, West Sussex. RH10 3NW

TEL: 01293 882425 Mobile: 07703344068

E-mail: jonathan.best@btinternet.com