



Automotive ignition systems

Hall TRIGGER IGNITION AMPLIFIER TYPE: IG 200 H

INSTALLATION INSTRUCTIONS

As long as you have a basic understanding of ignition and a strobe this kit should be easy to fit.

BROWN : **COIL + OR** ANY 12 V SUPPLY SWITCHED BY IGNITION.

BLUE : **EARTH** ENSURE GOOD CONNECTION TO BARE METAL.

WHITE : **COIL NEGATIVE** some rev counters and limiters to be connected here

DISTRIBUTOR : **PLUG HALL** connector into the distributor.



BROWN: COIL POS.

WHITE: COIL NEG

BLUE: EARTH

The Module bracket is connected to the coil with double sided tape, this is for transportation. It can be left like this or the tape can be removed.

If you are removing an old distributor then set the engine to TDC with the rotor arm pointing to number 1 so you know you are on the compression stroke.

All parts are available as spares should it get damaged.

NEGATIVE EARTH ONLY

Bestek, Oakhurst, Radford Road, Tinsley Green, West Sussex. RH10 3NW
Mobile: 07703344068

E-mail: jonny_best@msn.com